



Redding Reloading Equipment Cortland, NY 13045

www.redding-reloading.com techline@redding-reloading.com 607-753-3331

Replacement Bullet Seating Micrometer Instructions

Congratulations on your purchases of the Redding Bullet Seating Micrometer for your seating die. This unit directly replaces the original seat plug in your current seating die and adds a higher level of precision, repeatability and flexibility.

Before you start, be sure you have the correct Bullet Seating Micrometer for your die set. Check the number on the existing seat plug which came with your die and compare it to the number on your micrometer.

Mount your seating die in the press as normal.

Note: If you have previously used this die and have the body lock ring adjusted for a proper crimp there is no need to reset that function.

To replace your original seat plug:

1. Loosen its lock ring to remove it and install the replacement Bullet Seating Micrometer in its place. The unit should be tightened securely against the die body.
2. Seat a sample bullet to determine the cartridge overall length (OAL).
3. The micrometer may now be adjusted up or down to accomplish desired O.A.L. by a direct adjustment of the micrometer.

See the Bullet Seating Micrometer Chart on the website for additional information.

If you have any questions regarding the above procedures, please contact our tech support members.

Email: techline@redding-reloading.com

Phone: (607) 753- 3331

Lifetime Warranty Disclaimer:

All Redding Reloading Equipment has been carefully inspected prior to shipment and is fully warranted to be free from defects in materials and workmanship for life.

Any product or parts which prove to be defective will be replaced or repaired without charge if returned prepaid to the factory.

Note: We reserve the right to decline responsibility where misuse or careless handling is evident or where repairs or modifications have been made or attempted by others.