



Redding Reloading Equipment Cortland, NY 13045

www.redding-reloading.com techline@redding-reloading.com 607-753-3331

Universal Decapping Die Instructions



Thank you for choosing Redding Reloading Equipment. Your new Universal Decapping Die allows you to deprime and clean your cases before sizing. The small decapping die (Part #69100) will handle 22 and larger caliber cases up to 2-½" long. The large decapping die (Part #69200) will handle 7mm and larger caliber cases up to 3" long. An optional 17 & 20 caliber decapping rod (Part #69250) is available for small decapping die. The (Part #69250) rod is also designed to be used with BR and PPC cases having small .060" flash holes. To exchange decapping rods, simply remove the small clip from the decapping rod at the top of the die.

- Install the correct shellholder in your reloading press and raise the ram to its uppermost position.
- Screw the decapping die into your reloading press until it makes light contact with shellholder and tighten the lock ring against the top of your reloading press.
- Tighten the set screw on the lock ring and you are ready to start decapping.

Replacement Decapping Rods: Small: (Part #69275), Large: (Part #69300)

Warning: Do not decap live primers!

If you have any questions regarding the above procedures, please contact our tech support members.

Email: techline@redding-reloading.com

Phone: (607) 753- 3331

Lifetime Warranty Disclaimer:

All Redding Reloading Equipment has been carefully inspected prior to shipment and is fully warranted to be free from defects in materials and workmanship for life.

Any product or parts which prove to be defective will be replaced or repaired without charge if returned prepaid to the factory.

Note: We reserve the right to decline responsibility where misuse or careless handling is evident or where repairs or modifications have been made or attempted by others.